



Go from unfinished wood post to finished pvc wrap in a snap.

With KlearSnap's unique locking joint and notched moulding kits, KlearSnap Post Wraps can usually be installed by one person in less than ten minutes.* And since KlearSnap Post Wraps are manufactured from Klear cellular PVC, they don't need to be painted for protection. However, if a color other than white is desired, 100% Acrylic House Paint can be used with amazing results. It really is true; beautifying wood posts is a snap with KlearSnap Post Wraps!

*Actual installation times will vary based on the general installation circumstances, the drying time of adhesives used and the expertise of the installer.

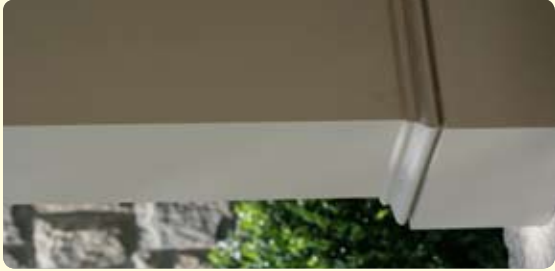

SCIENTIFIC CERTIFICATION SYSTEMS
SCS-MC-01966

KLEER™ TRIMBOARD

CUT IT.
GLUE IT.
WRAP IT.
SNAP IT.
NAIL IT.
PAINT IT.



KLEERSnap™ Post Wrap/rap

KLEERSnap Moulding Kits


KLEERSnap Post Wraps provide an easy, cost effective way to improve the appearance and durability of exterior posts. KLEERSnap Post Wraps are manufactured from Kleeer cellular PVC to create the finished look of natural wood while being virtually impervious to moisture and insects. KLEERSnap Post Wraps come with a lifetime warranty against splintering, rotting, delaminating or swelling excessively due to moisture.*

KLEERSnap Post Wraps contain pre-consumer recycled materials verified by Scientific Certification Systems. Kleeer encourages all of our customers to use products manufactured with recycled material and to recycle our products whenever possible.




KLEERSnap Post Wrap

product description	aActual inside dimensions	aActual outside dimensions	KLeersnap will fit up to
4" x 4" KLEERSnap	3-3/4" x 3-3/4"	4-3/4" x 4-3/4"	4" x 4" Post
5" x 5" KLEERSnap	4-1/2" x 4-1/2"	5-1/2" x 5-1/2"	4" x 4" Post
6" x 6" KLEERSnap	5-3/4" x 5-3/4"	6-3/4" x 6-3/4"	6" x 6" Post
8" x 8" KLEERSnap	6-1/4" x 6-1/4"	7-1/4" x 7-1/4"	6" x 6" Post
10" x 10" KLEERSnap	8-1/4" x 8-1/4"	9-1/4" x 9-1/4"	8" x 8" Post

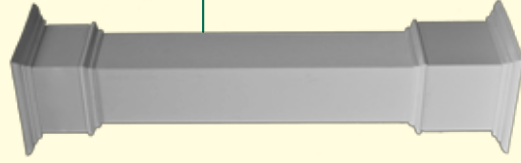

KLEERSnap Base & Cap Moulding Kit

KLEERSNAP 4" x 4" Base & Cap Kit	7" Post Wrap Base
KLEERSNAP 5" x 5" Base & Cap Kit	5" Post Wrap Cap
KLEERSNAP 6" x 6" Base & Cap Kit	Base Cap Moulding for Base
KLEERSNAP 8" x 8" Base & Cap Kit	Base Cap Moulding for Cap
KLEERSNAP 10" x 10" Base & Cap Kit	Bed Moulding for Base
	Bed Moulding for Cap

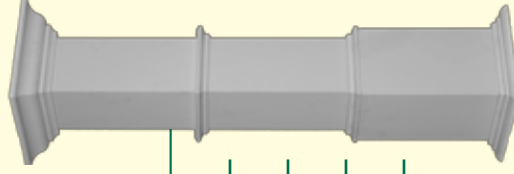

KLEERSnap Crown Moulding Kit

KLEERSNAP 4" x 4" Crown Kit	12" Post Wrap Base
KLEERSNAP 5" x 5" Crown Kit	Base Cap Moulding for Post
KLEERSNAP 6" x 6" Crown Kit	Base Cap Moulding for Base
KLEERSNAP 8" x 8" Crown Kit	Bed Moulding for Base
KLEERSNAP 10" x 10" Crown Kit	Crown Moulding for Top of Post



KLEERSnap Bed Moulding Kit

KLEERSNAP 4" x 4" Bed Kit	12" Post Wrap Base
KLEERSNAP 5" x 5" Bed Kit	Base Cap Moulding for Base
KLEERSNAP 6" x 6" Bed Kit	Bed Moulding for Base
KLEERSNAP 8" x 8" Bed Kit	Bed Moulding for Top of Post
KLEERSNAP 10" x 10" Bed Kit	





KLEERSnap INSTALLATION GUIDELINES

Step 1 KLEERSnap POST WRAPS ARE NOT STRUCTURAL PRODUCTS AND SHOULD ONLY BE USED IN NON-LOAD BEARING APPLICATIONS.
HANDLE KLEERSnap POST WRAP WITH CARE TO PREVENT JOINT TAPE FROM TEARING.

STEP 1- Measure post height. Remove the KLEERSnap Post Wrap from its box and, while keeping it folded, cut it to the desired length.

Step 1 STEP 2- Carefully unfold the KLEERSnap Post Wrap and liberally apply a bonding adhesive deep inside each groove. Run a very small bead of adhesive (less than 1/16") along the tongue of the "snap" joint of the KLEERSnap Post Wrap to ensure a proper bond. *Do not* apply adhesive inside the groove of the "snap" joint.

For optimum results, use an adhesive specially formulated for PVC products, like Bond & Fill Fast Cure Structural Adhesive, that will allow enough time to work with the KLEERSnap Post Wrap without requiring hours to dry.

STEP 3- Wrap the KLEERSnap Post Wrap around the post and "snap" the outside edges together ensuring a tight closure along the entire length of the joint. Wipe away any excess adhesive from the "snap" joint.

Step 1 NOTE: When using KLEERSnap in a railing application, solid blocking must be attached between the post and KLEERSnap Post Wrap. Refer to your local building code for details.

STEP 4- Allow enough time for the bonding adhesive to dry (maybe as much as 24 hours depending on the adhesive used) before removing the tape. Once the adhesive is fully dried, remove the temporary joint tape and the KLEERSnap Post Wrap is complete.

STEP 5- KLEERSnap Post Wrap may be fastened to the post using nails or trim head screws. Nail or screw heads can be easily concealed using caulk or exterior spackle.

Step 2 NOTE: When removing the temporary joint tape in temperatures below 50 °F, use a heat gun to minimize adhesive residue on the KLEERSnap Post Wrap. In general, the longer the temporary tape is left in place, the more difficult it will be to remove without tape adhesive remaining on the KLEERSnap Post Wrap. Cleaners like "Goo-Gone" may be used to remove the adhesive residue. Avoid cleaners containing: Acetone, Ketones, Lacquer Thinners, MEK (Methyl Ethyl Ketone), Toluene or Turpentine as they may damage the surface of the KLEERSnap Post Wrap.

PAINTING KLEERSnap POST WRAPS AND ACCESSORIES

Step 2 KLEERSnap Post Wraps and Accessories are made from Klear Cellular PVC and do not require paint for durability, but may be painted to complement existing colors. Since KLEERSnap Post Wraps and Accessories do not absorb moisture like wood, it may take longer for paint to fully cure (up to 30 days). Once fully cured, however, KLEERSnap Post Wraps and Accessories will outperform wood in both paint adhesion and longevity.

Step 3 KLEERSnap Post Wraps and Accessories should be painted using 100% Acrylic Latex paints or other coatings specifically formulated for use on vinyl products. It is important that only colors with Light Reflective Values greater than 55% be selected when painting KLEERSnap Post Wraps and Accessories with 100% Acrylic Latex paint. If a color with a Light Reflective Value lower than 55% is desired, a coating specially formulated for use on exterior vinyl (like Sherwin Williams SuperPaint) must be used.

KLEERSnap Post Wraps and Accessories must be clean, dry and free from debris or any surface contaminants to maximize paint adhesion. Use a soft brush and standard household cleaner if necessary to clean the surface before painting. Stubborn stains may be removed with denatured alcohol.

Small surface imperfections including nail or screw holes may be repaired using painter's caulk or exterior spackle prior to painting.

Paint may be applied with a brush, sprayer or roller.

Always follow the paint manufacturer's recommendations for best results.

KLEERSnap ACCESSORY INSTALLATION GUIDELINES

KLEERSnap BASE/CAP

STEP 1- KLEERSnap Base may be cut to the desired height by simply cutting it to length while still folded.

STEP 2- Carefully unfold the KLEERSnap Base/Cap, making sure you don't tear the temporary joint tape. Liberally apply a bonding adhesive deep inside each groove. Run a very small bead of adhesive (less than 1/16") along the tongue of the "snap" joint of the KLEERSnap Base/Cap to ensure a proper bond. *Do not* apply adhesive inside the groove of the "snap" joint.

STEP 3- Wrap the KLEERSnap Base/Cap around the KLEERSnap Post Wrap and "snap" the outside edges together ensuring a tight closure along the entire length of the joint. Wipe away any excess adhesive from the "snap" joint.

STEP 4- Allow enough time for the bonding adhesive to dry (maybe as much as 24 hours depending on the adhesive used) before removing the tape. Once the adhesive is fully dried, remove the temporary joint tape and the KLEERSnap Post Wrap is complete.

STEP 5- The KLEERSnap Base/Cap may be attached to the KLEERSnap Post Wrap using bonding adhesive, adhesive caulk, nails or trim head screws. Nail or screw heads may be covered with caulk or exterior spackle.

KLEERSnap MOULDINGS

KLEERSnap Mouldings are pre-mitered and come with KLEERSnap Moulding Connectors that easily slide into the pre-cut slots to securely hold the mouldings together.

STEP 1- Apply a small amount of bonding adhesive to each of the mitered ends of the KLEERSnap Moulding pieces and carefully slide the pieces together.

STEP 2- Slide the rounded end of a KLEERSnap Moulding connector into each of the pre-cut slots on the back of the moulding pieces to hold them together while the adhesive dries.

STEP 3- After assembling three of the four pieces, slide the KLEERSnap Moulding onto the KLEERSnap Post Wrap or KLEERSnap Base/Cap, and install the fourth piece completing the moulding.

STEP 4- KLEERSnap Mouldings can be attached to the KLEERSnap Post Wrap or KLEERSnap Base/Cap using bonding adhesive, adhesive caulk, nails or trim head screws. Nail or screw heads can be easily concealed using caulk or exterior spackle.

Base/Cap

Step 1

Step 3

Moulding

Step 1

Step 2

Step 2

Step 3

Step 3

